Included in package

Hole positioning guide
Shoulder washers & screws
3/32” drill bit
Velcro Pad

Instructions
How to install a CloZures® Shutter to the window of Lippert’s (screw less) snap together frame.

You Provide

#1 INSTALL SHUTTER

Practice placing shutter on clean glass, before removing adhesive liners. With CloZure label on the right side, set shutter on bottom ledge of frame then rotate on to glass.

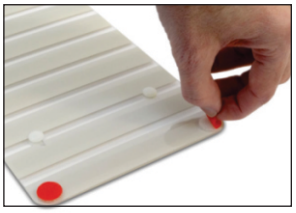

To adhere the shutter to the window remove from the back side of the shutter the 9 red adhesive liners, exposing the adhesive of the 3M Dual Lock fasteners (similar to Velcro). Next set the shutter on the bottom ledge of frame then rotate onto glass. Press all Velcro fasteners firmly to glass.

#2 MARK & DRILL POSITIONING HOLES

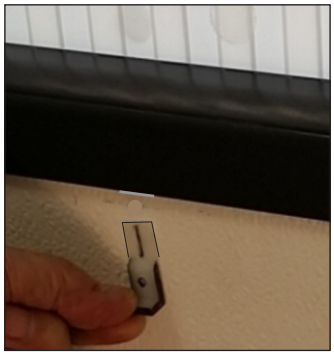

Slide **hole positioning guide** up into small slot found in the **middle** of **the bottom** side of frame.

With the **guide** pushed all the way up into the slot, mark the hole position. Repeat process using small slot located 5-1/8” to the right.

Using the 3/32” drill bit (included in package) drill the 2 holes you’ve marked. Make holes approx 1/4” deep. These pilot holes will be used to fasten the control lever.

#3 FASTEN & ENGAGE CONTROL LEVER

Install control lever to frame using provided shoulder washers and screws, (2 ea.). Use hand driver only. Do not over tighten.

Align pad on back of control lever, to 3/4” round Velcro pad on bottom of shutter. Press together.

Note: Depending on the location of the opening in the RV screen door, the control lever may need to be re-positioned. A second 3/4” Velcro pad is included for this purpose.

Congratulations

Your installation is complete !

ZARCOR Solutions
4400 Sunbelt Dr.
Addison, TX 75001

www.zarcor.com
972-380-8724